

PAVER INSTALLATION BASICS

SAND

SET

VS

MORTAR

SET

JOINTS


$\pm 3/16"$



Joint thickness of + or - 3/16"

Joints filled with ASTM C-144 Sand and Sealed with Sand Joint Stabilizer or Acceptable Polymeric Sand



$\pm 3/16"$

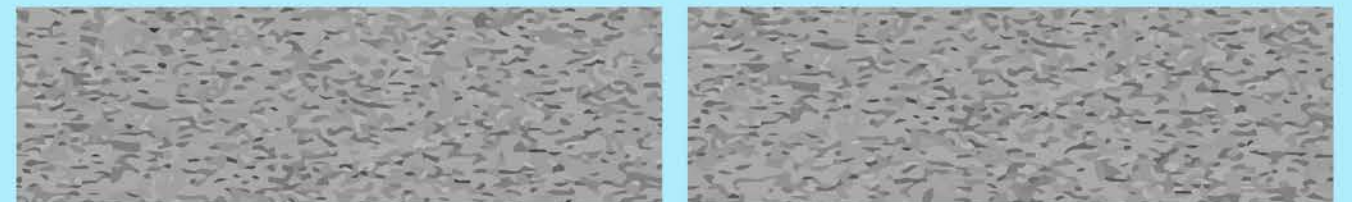


Joint thickness of + or - 3/16"

Joints filled with ASTM C-144 Sand and Sealed with Sand Joint Stabilizer or Acceptable Polymeric Sand

SITE PREP

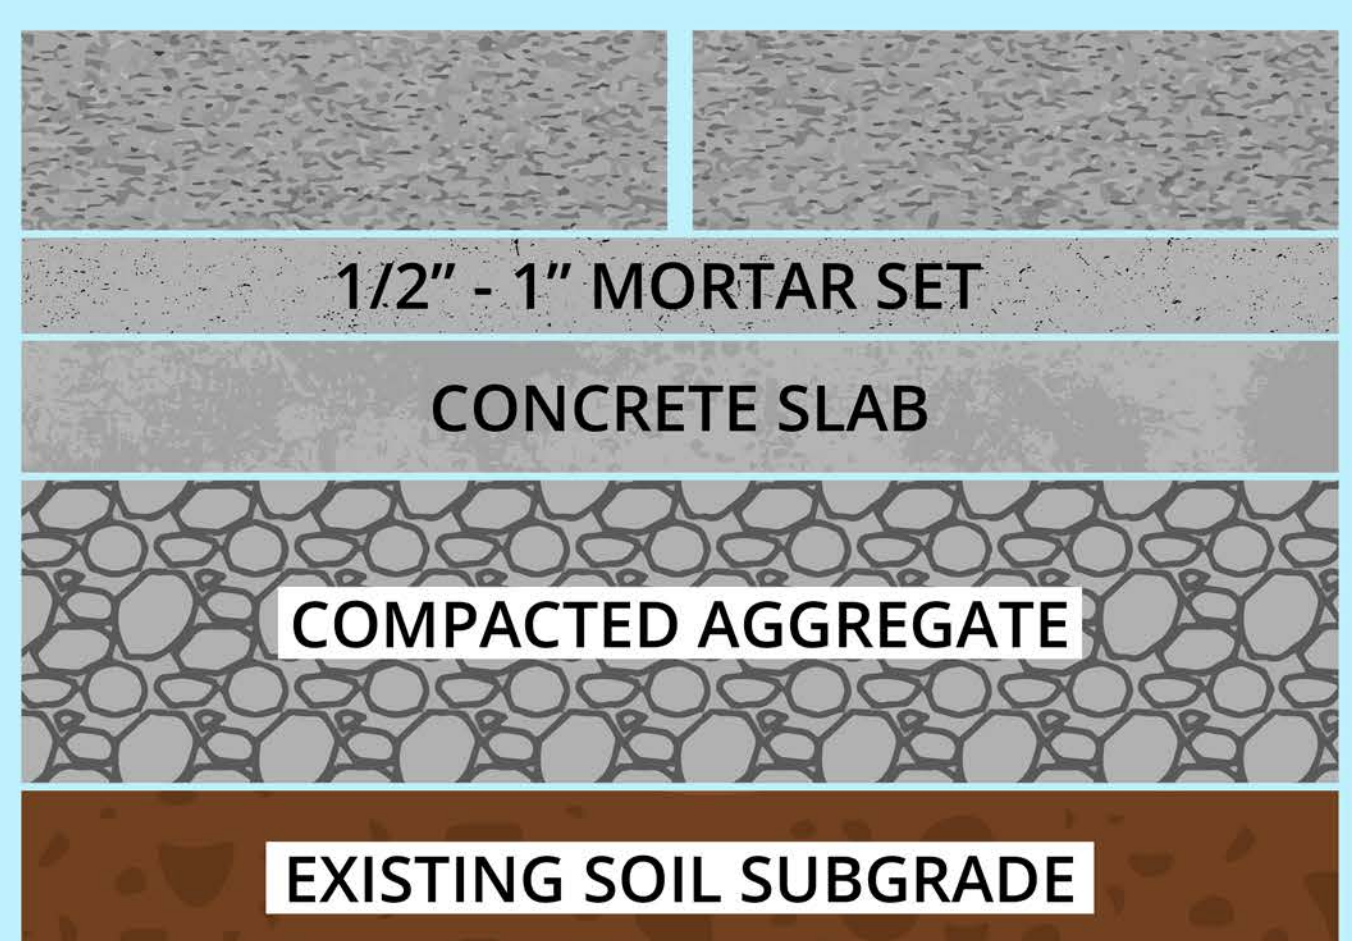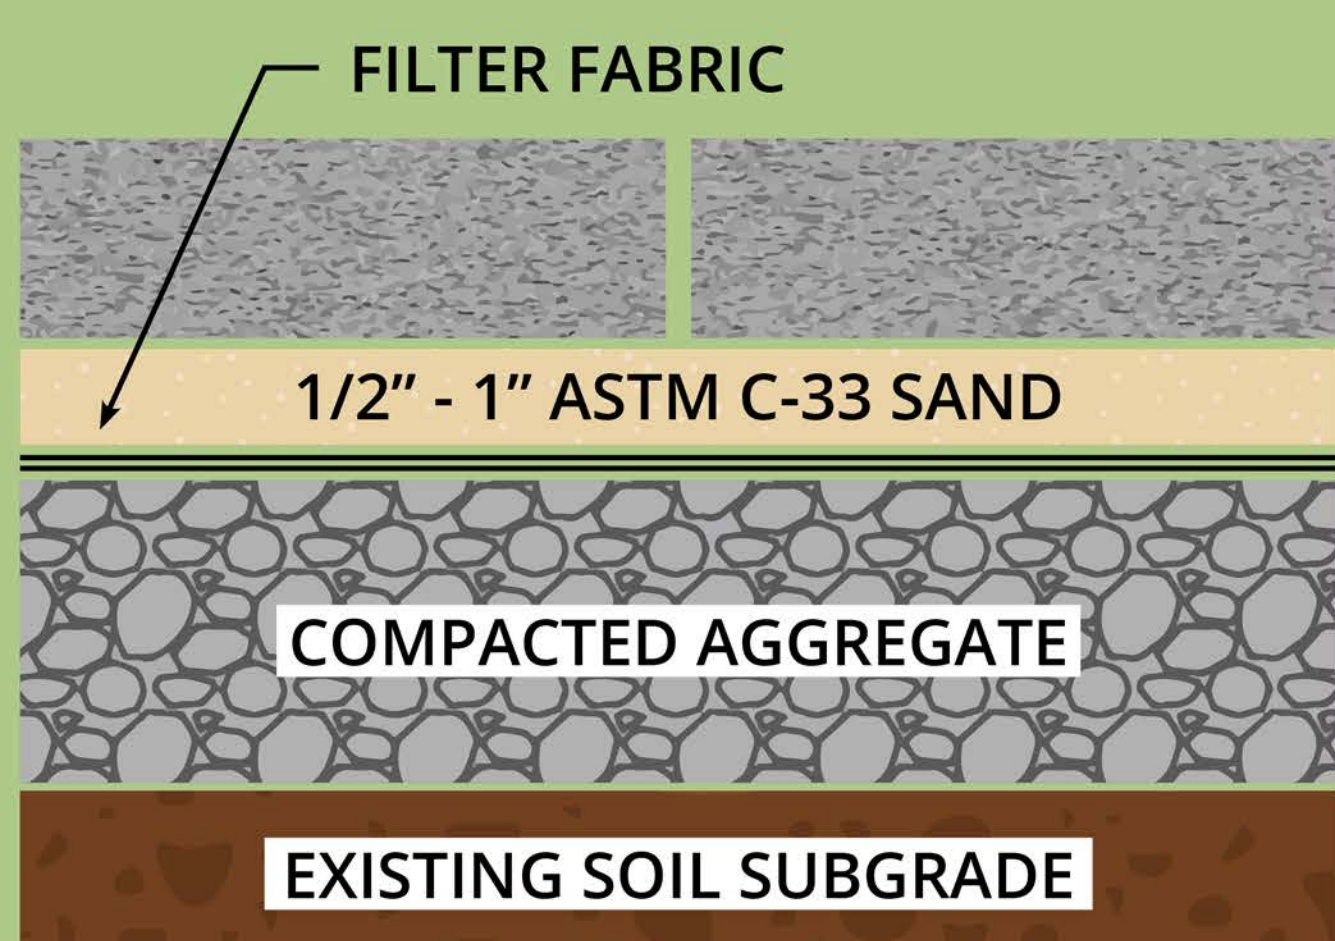


INSTALLATION

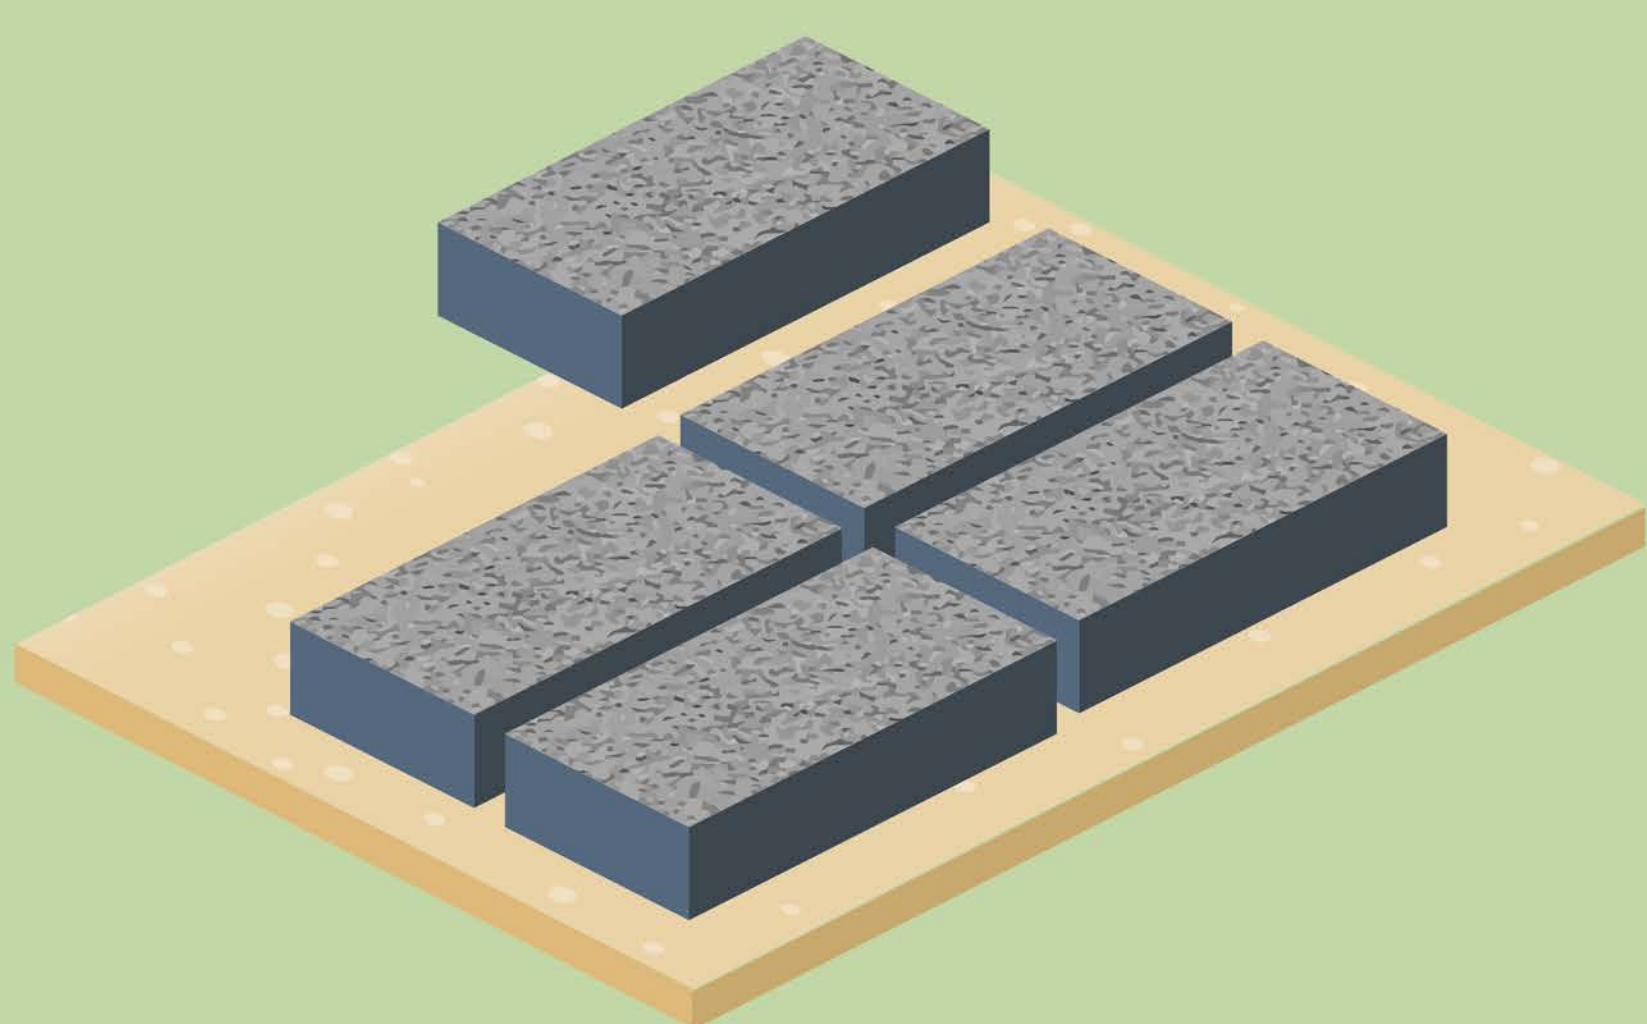

Lay pavers on the bedding sand in the pattern indicated on the drawings.

Sweep the surface clean prior to compacting.

Compact and seat the pavers into the bedding.

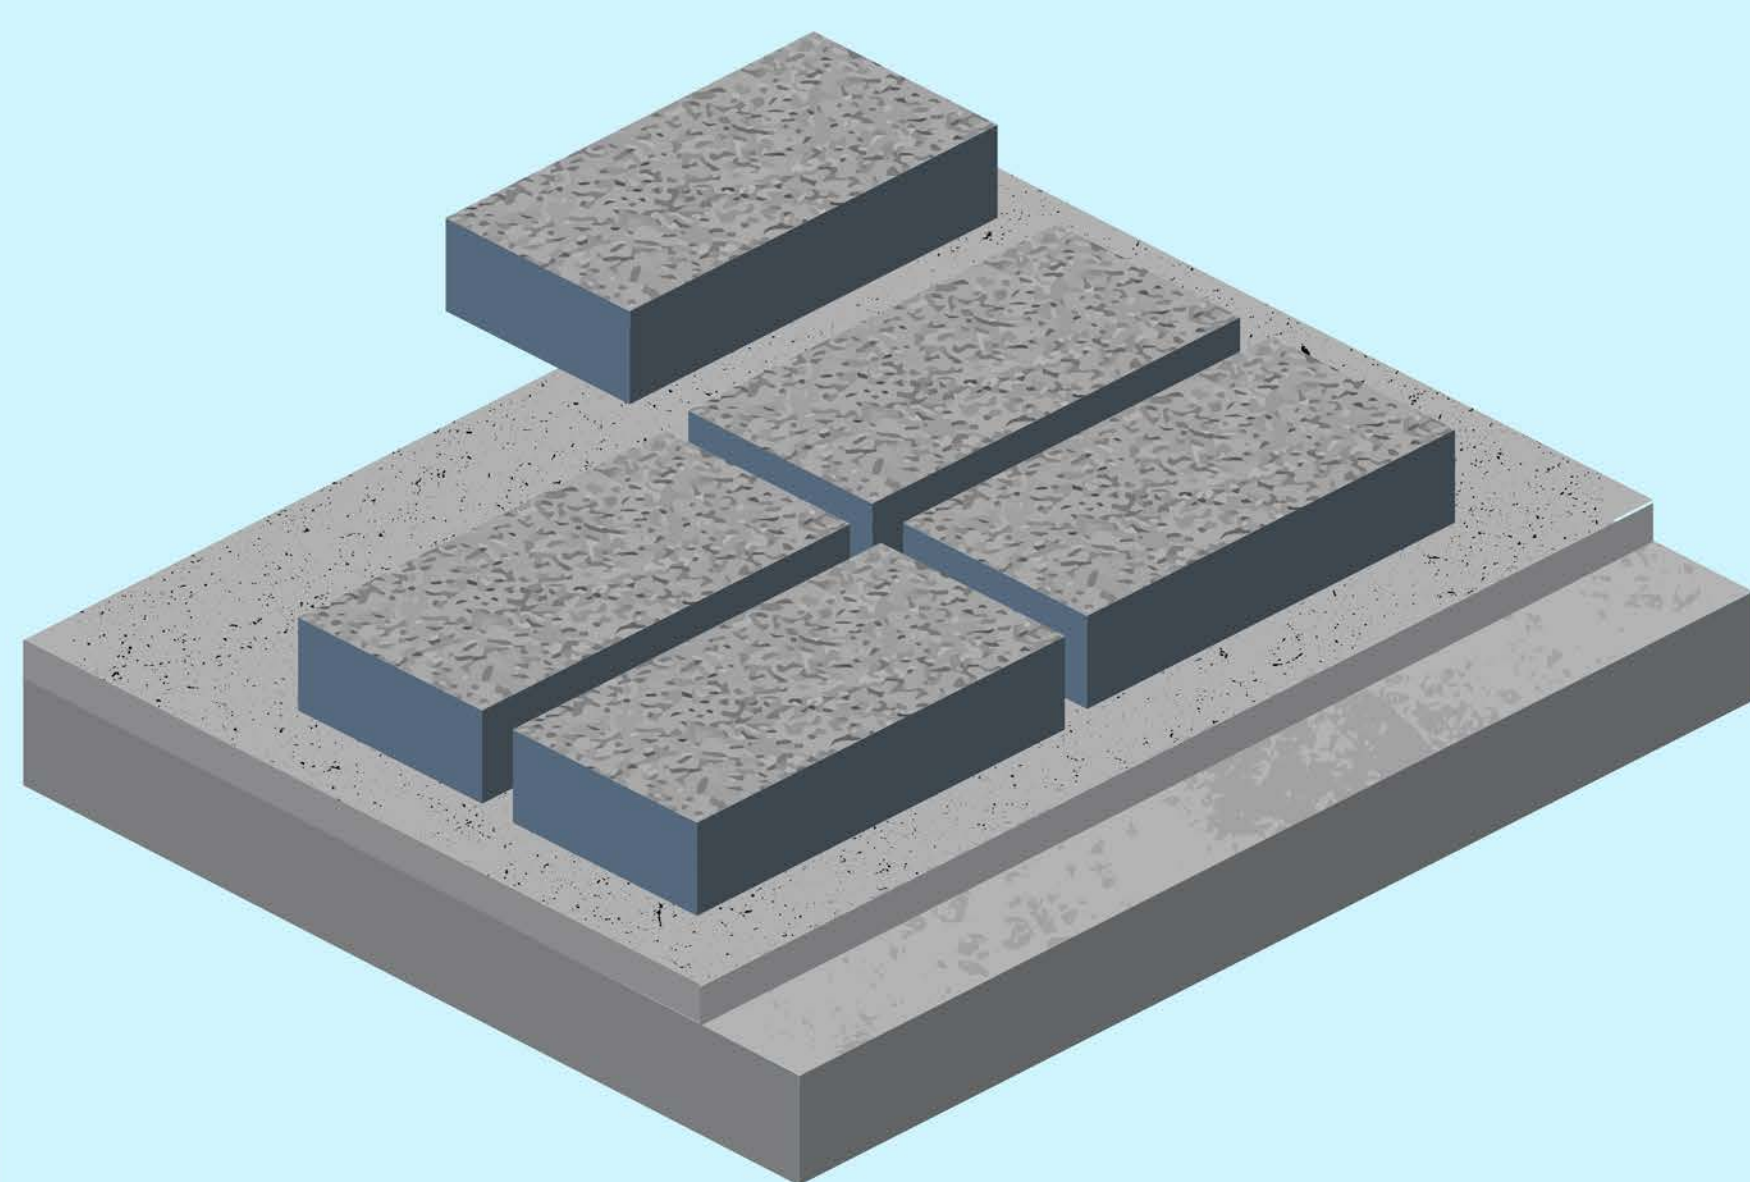

Mix and apply mortar setting bed material in accordance with the manufacturer's instructions.

100% paver bonding coverage is recommended. Backbutter to achieve 95% coverage for exterior installations.

Lay pavers in pattern(s) on mortar bed as indicated on the drawings.

PRO TIPS

1. Lippage: no greater than 1/8" difference in height between adjacent pavers.
2. Maintain clean surfaces and joints prior to applying jointing material.
3. Allow 1/8" to 1/4" above specified surface elevations to compensate for minor settlement.
4. Do not install in inclement weather.
5. This is for illustration purposes only. All pavers have draft; see paver specifications for tolerances.